
# DIN W72×H36mm of counter/timer with indication only

#### Features


- Upgraded counting speed: 1cps/30cps/2kcps/5kcps
- Application of Up/Down input mode
- Selectable Up/Down indication of display value
- Wide range of input power supply: 100-240VAC 50/60Hz, 12-24VAC/DC
- Selectable Counter or Timer function by internal DIP switch selectable time ranges
- Built-in Microprocessor





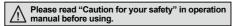

# Ordering information

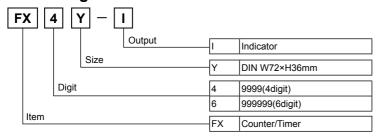

# Specifications


Model		FX4Y-I	FX6Y-I	
Digit		4digit	6digit	
Digit size		W8×H14mm	W4×H8mm	
Power AC Voltage type		100-240VAC 50/60Hz		
supply	AC/DC Voltage type	12-24VAC 50/60Hz, 12-24VDC universal		
Allowable	voltage range	90 to 110% of rated voltage		
Power	AC Voltage type	Approx. 4.5VA(240VAC 60Hz)		
con- sumption	AC/DC Voltage type	Approx. 4.5VA(24VAC 60Hz), Approx. 2.8W(24VDC)		
Max. cou	nting speed	Selectable 1cps/30cps/2kcps/5kcps by internal DIP switch		
Min. input	INHIBIT input	Min. 20ms		
signal width	RESET input	imin. 20ms		
	CP1, CP2 input	No voltage input - Impedance at short-circuit : Max. 4	470Ω, Residual voltage at short-circuit : Max. 1VDC	
Input	RESET input	Impedance at open-circuit : Min. 1	00kΩ	
Memory p	protection	Approx. 10 years(When using non-volatile semiconductor memory)		
Eexternal	power	12VDC ±10% 50mA Max.		
Insulation	resistance	Min. 100MΩ(at 500VDC megger)		
Dielectric	strength	2000VAC 50/60Hz for 1 minute		
Noise AC type		±2kV the square wave noise(pulse width : 1μs) by the noise simulator		
strength	DC type	±500V the square wave noise(pulse width : 1μs) by the noise simulator		
\/ibratian	Mechanical	0.75mm amplitude at frequency of 10 to 55Hz(for 1 min.) in each of X, Y, Z directions for 1hour		
Vibration	Malfunction	0.5mm amplitude at frequency of 10 to 55Hz(for 1 min.) in each of X, Y, Z directions for 10 minutes		
Charle	Mechanical	300m/s²(approx. 30G) in each of X, Y, Z directions for 3 times		
Shock	Malfunction	100m/s²(approx. 10G) in each of X, Y, Z directions for 3 times		
Environ-	Ambient temperature	10 to 55°C, storage: -25 to 65°C		
ment	Ambient humidity	35 to 85%RH, storage: 35 to 85%RH		
Approval		c <b>%2</b> 05		
Unit weight		Approx. 130g	Approx. 132g	

XEnvironment resistance is rated at no freezing or condensation.

J-36 Autonics

# **Up/Down Counter/Timer**

#### Connections

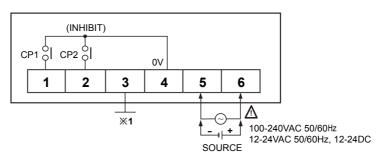

X1: It can be selected RESET or sensor power(+12VDC 50mA) by internal PIN operation.(Refer to J-40)

Sensor

XCP1, CP2: Input signal terminals when using as counter.


※INHIBIT(CP2): Time Hold terminal when using for timer(Connect switch to ②+⑤ from the external.)

XOperated by a Power ON Start method when it is used as a timer.

# Input connections

#### Using for no-voltage input(NPN)

Solid-state input(Standard sensor : NPN output type sensor)

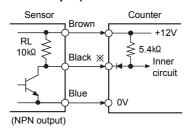




#### Counter Brown +12V 5.4kΩ Black × Inner circuit Blue 0V (NPN open collector

output)

#### Contact input

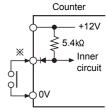


XPlease select the counting speed as 30cps when using for counter.

# Using for voltage input(PNP)


FXY series is for no-voltage input type, it is not available to count applying DC voltage from the external. For using PNP type sensor, please use as the following to count.

#### PNP output type sensor

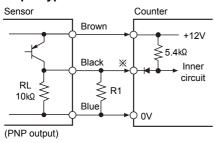

XPlease set R1 value to make the composed resistance of RL + R1 as Max.  $470k\Omega$  is an impedance for short-circuit. **XCP1**, CP2(INHIBIT), RESET input

#### PNP open collector output type sensor

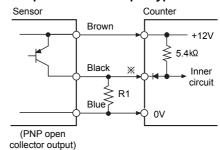

XIn case of PNP open collector output type sensor, please connect lower than 470Ω of R1 to input terminal before using.

(A) Photo electric sensor

(C) Door/Area

(D) Proximity

(E) Pressure

(H) Temp. controller

(I) SSR/

(M) Tacho/ Speed/ Pulse meter

(N) Display unit

(P) Switching mode powe supply

motor& Driver&Co

(R) Graphic/ Logic panel

(S) Field network device

(T) Software

J-37 **Autonics** 

# **FXY Series**

## Counting method

Be careful to select sensor because the counting method of NPN output type sensor is different from PNP output type sensor.


#### • NPN output type sensor

: When the sensor is changed from OFF to ON, it counts.

# Target Have None LED ON OFF Counting number


#### • PNP output type sensor


: When the sensor is changed from ON to OFF, it counts.

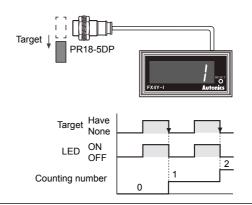

#### Dimensions



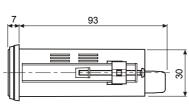


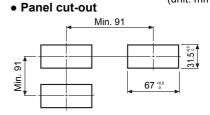


(unit: mm)

# **■** Counting operation of indication type(Counter)


#### • Up mode

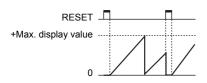


#### • Down mode

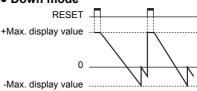

#### • Up/Down-A, B, C mode

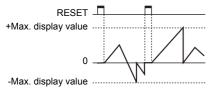


#### • Up/Down-D, E, F mode

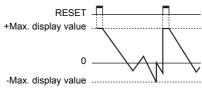


# ■ Counting operation of indication type(Timer)

#### • Up mode

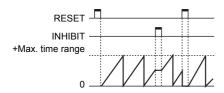


#### • Down mode

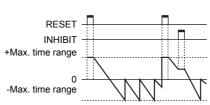

J-38 Autonics

# **Up/Down Counter/Timer**

# **■** Description of inner DIP switches

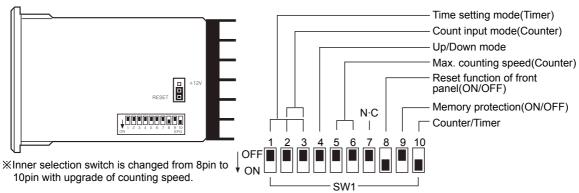

#### • Up/Down mode

	SW	1	Function
	4	OFF ON	Up mode
4	4	OFF ON	Down mode

#### • Reset function of front panel(ON/OFF)

SW1		Function
	OFF ON	Disable the front panel reset function
0	OFF ON	Enable the front panel reset function

#### • Memory protection(ON/OFF)

SW1		Function
9	OFF ON	Enable the memory protection
	OFF ON	Disable the memory protection

#### • Counter/Timer

SW1		Function
10	OFF ON	Timer
10	OFF ON	Counter

#### Max. counting speed

	<u> </u>
SW1	CP1, CP2
OFF ON	1cps
5 6 OFF M	30cps
OFF ON	2kcps
OFF ON	5kcps

# **■** Time setting mode(Timer)

SW1	4digit	6digit	SW1	4digit	6digit
1 2 3 OFF ON	99.99sec	99999.9sec	0 1 2 3 OFF ON	999.9min	99999.9min
0 1 2 3 OFF	999.9sec	999999sec	OFF 0N 1 2 3	99hour 59min	99hour 59min 59sec
OFF 1 2 3	9999sec	99min 59.99sec	OFF 1 2 3	999.9hour	9999hour 59min
1 2 3 OFF ON	99min 59sec	999min 59.9sec	1 2 3 OFF ON	9999hour	99999.9hour

(A) Photo electric sensor

(B) Fiber optic sensor

(C) Door/Area sensor

(D) Proximity sensor

(E) Pressure sensor

(F) Rotary encoder

(G) Connector/ Socket

(H) Temp. controller

(I) SSR/ Power

(J) Counter

Imer

(M) Tacho/ Speed/ Pulse meter

(N) Display unit

(O) Sensor controller

(P) Switching mode power supply

(Q) Stepper motor& Driver&Controller

(R) Graphic/ Logic panel


(S) Field network device

(T) Software

(U) Other

Autonics J-39

### **■** Input mode(Counter)

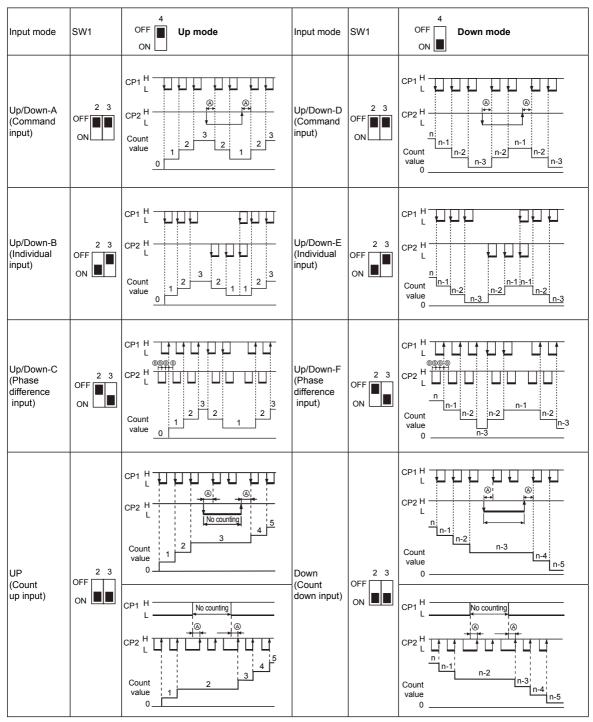

※ (a): Over min. signal width, (b): Over 1/2 of min. signal width.

If the signal width of (a) or (b) is less than min. signal width, ±1 of count error is occured.

Xn: + max. display value(FX4Y-I: 9999, FX6Y-I: 999999)

J-40 Autonics

# **Up/Down Counter/Timer**

## Proper usage

#### O Reset


#### Reset

When selecting a reset input/output mode, please apply the external reset or manual reset signal.

If it is not reset, it is operated as the prior mode.


#### • Reset signal width

It is reset perfectly when the reset signal is applied for **min. 20ms** regardless of the contact input & solid-state input.

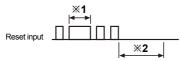

- ※1: In case of a contact reset, it is reset perfectly if the ON time of reset signal is applied for min. 20ms even though a chattering is occured.
- ※2: Signal input(CP1, CP2)is possible if there is no reset input for min. 50ms after reset input.


#### Min.signal width

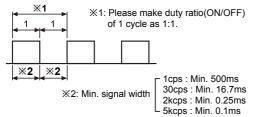

#### Max. counting speed

This is a response speed per 1 sec. when the duty ratio (ON:OFF) of input signal is 1:1.

If the duty ratio is not 1:1, the width between ON and OFF should be over min. signal width and the response speed will getting slower against input signal. And one of ON width and OFF width is under min. signal width, this product may not response.

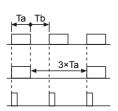


Ta(ON width) and Tb(OFF width)need to be over min. signal width.

When duty ratio is 1:3, the max.counting speed will be 1/2 from the rated spec.

It can not respond if it is smaller than min. signal width(Ta).


#### O Detach the case from body

While pushing the Lock part with driver to the front, push the terminal block.

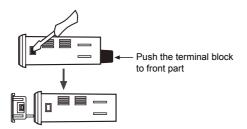


※Be careful not to be wounded by tools.

#### O Using switching pin of Reset / +12V

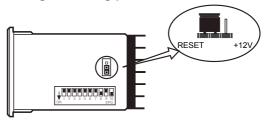


#### When using terminal 3 for external reset terminal

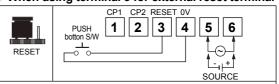


Provide sensor power from external when use sensor and connect counter 0V terminal(No.4) to GND (0V) of external power.


#### • When using terminal 3 for sensor power terminal

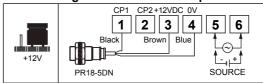

#### **○ INHIBIT[For timer]**

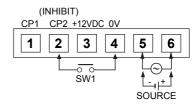


- It becomes the INHIBIT mode when SW1 turns on. (Time Hold)
- When power is applied, it starts to progress and INHIBIT mode is used to stop the time is under the progress at the moment.
- When SW1 is OFF, timer starts to progress again.

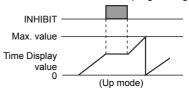

#### O Power

The inner circuit voltage starts to rise up for the first 100ms after power on, the input may not work at this time. And also the inner circuit voltage drops down for the last 500ms after power off, the input may not work at this time.

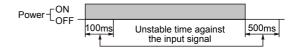

(A) Photo electric sensor

(B) Fiber optic sensor

(C) Door/Area sensor

(D) Proximity sensor

(E) Pressure sensor

(F) Rotary encoder

Connector/ Socket

(H) Temp. controller

SSR/ Power controller

> (J) Counter

(K) Timer

Panel meter (M)

(M) Tacho/ Speed/ Pulse meter

(N) Display unit

Sensor controller (P) Switching

mode power supply

(Q) Stepper motor& Driver&Controller

(R) Graphic/ Logic panel

(S) Field network device

(T) Software

(U) Other

Autonics J-41